

(19)



Europäisches Patentamt
European Patent Office
Office européen des brevets



(11) Publication number:

0 208 192 B1

(12)

EUROPEAN PATENT SPECIFICATION

(45) Date of publication of patent specification: **04.08.93** (51) Int. Cl.⁵: **G06F 12/14**

(21) Application number: **86108612.2**

(22) Date of filing: **24.06.86**

(54) **Memory stack for ring protection architecture.**

(30) Priority: **27.06.85 US 749245**

(43) Date of publication of application:
14.01.87 Bulletin 87/03

(45) Publication of the grant of the patent:
04.08.93 Bulletin 93/31

(84) Designated Contracting States:
DE FR GB IT

(56) References cited:
US-A- 3 858 182 US-A- 3 916 385
US-A- 4 104 721 US-A- 4 177 510
US-A- 4 297 743 US-A- 4 442 484

(73) Proprietor: **Bull HN Information Systems Inc.**
Corporation Trust Center 1209 Orange Street
Wilmington Delaware(US)

(72) Inventor: **Morganti, Victor M.**
101 Lexington Rd.
Lincoln, MA 01773(US)
Inventor: **Prange, Patrick E.**
1539A Beacon St.
Brookline, MA 02146(US)

(74) Representative: **Frohwitter, Bernhard,**
Dipl.-Ing. et al
Bardehle-Pagenberg-Dost-Altenburg & Part-
ner Patent- und Rechtsanwälte Galileiplatz 1
Postfach 86 06 20
8000 München 80 (DE)

Note: Within nine months from the publication of the mention of the grant of the European patent, any person may give notice to the European Patent Office of opposition to the European patent granted. Notice of opposition shall be filed in a written reasoned statement. It shall not be deemed to have been filed until the opposition fee has been paid (Art. 99(1) European patent convention).

EP 0 208 192 B1

Description

BACKGROUND OF THE INVENTION

1. Field of the Invention

This invention relates generally to data processing systems, and more particularly to a method and apparatus for protecting information.

2. Description of the Prior Art

Computer systems have grown from the simple batched systems, wherein the valuable resource of random access memory was allocated to a single program, to the present-day multiprogramming multiprocessing systems wherein information is shared among a community of users. In this type of shared environment, protection of shared information is required not only to maintain user security and privacy and restrict access of information to those users entitled to it, but to guarantee system integrity and reliability by limiting the propagation of errors through intentional or unintentional altering of shared information. Several schemes have been utilized in the past in order to protect information. Some of them are detailed by Robert M. Graham in a paper entitled "Protection in an Information Processing Utility", published in CACM (May 1968).

Key to the protection of information has been to restrict access to procedures that can execute on a processor to those entities having the right to use those procedures. One such concept groups the sets of procedures into rings that can unambiguously be ordered by increasing the power or level of privilege. By assigning a collection of sets of procedures to a collection of concentric rings, and assigning numbers to each ring with the smallest ring having the smallest number, and each succeeding larger ring having a progressively greater number, different levels of privilege can be unambiguously assigned to the user of a segment of a computer system. Under this concept, the innermost ring having the smallest number assigned to it has the greatest privilege. Hence it can be postulated that users in the lowest ring number can access information having higher ring numbers, but users in the higher ring number cannot access information having lower ring numbers or can access information in the lower ring number only in a specified manner. The ring concept of information protection was used by the MULTICS operating system (Multiplexed Information and Computing Service) and was implemented in Honeywell's 635 and 645 computers. The MULTICS philosophy utilizes 64 rings of protection numbered as rings 0-63. It is described in Chapter 4 of

a book entitled "The MULTICS System: An Examination of its Structure" by Elliott I. Organick, published by MIT Press, and also by the MULTICS System Programmer's Manual, 1969, MIT Project Mack. Briefly, the MULTICS system does not utilize a pure ring protection strategy, but rather employs the ring bracket protection strategy, wherein a user's access rights with respect to a given segment are encoded in access-mode and a triple ring number (R1, R2, R3), called the user's ring brackets for a given segment. This technique is implemented wholly in software. Because the MULTICS and Honeywell's 645 version of ring protection was implemented mainly in software, considerable operating system supervisor overhead was entailed, particularly when calls to greater or lesser power were made by trapping to a supervisor procedure. This made the system relatively slow. Accordingly later versions implemented the ring protection concept in hardware. In one such system data and procedure segments were grouped into a hierarchy of four rings or classes. The four rings of privilege levels are identified by entities 0-3, each ring represents a level of privilege in the system with level 0 having the most privilege and level 3 having the least. Level 0 is known as the innermost ring and level 3 is the outer ring. The basic notion is that a procedure belonging to an inner ring has free access to data in an outer ring. Conversely a procedure in a outer ring cannot access data in an inner ring without incurring a protection violation exception. Transfer of control among procedures is monitored by a protection mechanism, such that a procedure executing in an outer ring cannot directly branch to a procedure in an inner ring. This type of control transfer is possible by the execution of a special call instruction. To gain speed the instruction was implemented mainly in hardware or firmware. In order to protect this instruction against misuse certain conventions were set up. This has the disadvantage of inflexibility in calling procedures. Since the call instruction is designed to be wholly in firmware or hardware, the rules of procedure must be adhered to even though the system architecture evolves into a type not contemplated by the designer.

What was needed was a call instruction for calling procedures that had the flexibility of the MULTICS system to change algorithms just by changing the software programs, and the speed and efficiency of the hardware/firmware protection means that will meet the criteria of functional capability, economy, simplicity in programming generality.

OBJECTS

It is an object of the instant invention to provide an improved call instruction for a ring protection mechanism.

It is another object of the invention to provide an improved procedure call instruction for ring protection hardware which is fast, yet flexible.

These and other objects of the invention will become apparent from the description of a preferred embodiment of the invention, when read in conjunction with the drawings contained herewith.

SUMMARY OF THE INVENTION

The foregoing objects of the invention are achieved by the memory stack as claimed in claim 1 and by the method as claimed in claim 2.

The call and return instructions are intended to provide a formal and secure way for procedures to call each other; and when needed, to alter the execute privilege of a process.

The normal way of changing the ring of execution of a process is via a call to a gate having a lower-numbered ring (more privilege) and subsequent outward return. An inward call represents the invocation of a user-provided protected subsystem or a supervisor procedure. An outward return represents a return to the calling procedure.

A main function of the call instruction is also to allow the calling procedure (CGP) to pass parameters to the called procedure (CDP). This is done basically by acquiring a call frame in an appropriate stack segment and then loading this frame with the call context. A register is then loaded with a pointer to the call frame base.

BRIEF DESCRIPTION OF THE DRAWINGS

The novel features which are characteristic of the invention are set forth with particularity in the appended claims. The invention itself, however, both as to organization and operation together with further objects and advantages thereof may best be understood by reference to the following description in conjunction with the drawings in which:

Figure 1 shows the format of a descriptor segment base register.

Figure 2 shows one typical format of a stack segment.

Figure 3A is the format of a current frame pointer utilized in addressing a frame of a wired stack segment; and Figure 3B is the format of a current frame pointer utilized in addressing a frame of a non-wired stack segment.

Figures 4 and 5 diagrammatically show the addressing of wired and non-wired stack segments, respectively.

Figure 6 diagrammatically shows the state of stack segments for a process executing in ring 3.

Figure 7 shows the state of stack segments after a procedure in ring 3 makes a call to a procedure in ring 2.

Figures 8-13 are flowcharts of the steps of a call instruction.

DESCRIPTION OF A PREFERRED EMBODIMENT

General Discussion

The invention operates typically in a hardware system environment which is disclosed in U.S. Patent No. 4,297,743, issued October 27, 1981, and entitled "Call and Stack Mechanism for Procedures Executing in Different Rings". However the environment is modified and enhanced by the invention which utilizes a call instruction and a new stack structure which supports both control as well as data storage. Under the prior art, as noted in column 38, lines 13-15 of the above-cited U.S. patent No. 4,297,743, "the procedure call is effected by hardware/firmware instructions and the hardware recognizable mechanism called the stack."

The invention has control storage support which is managed by the hardware. A control frame is acquired by the hardware whenever executing a CALL INSTRUCTION or processing a trap. This frame becomes the current frame and a base register is loaded with a pointer to the base of the current frame. The new stack mechanism NS has data storage support which is managed by the software. Whenever entering a procedure, a frame is acquired and control information (for example, the return address of the caller) is stored in the frame. The called procedure can then elect to grow the frame if it needs data storage. Upon executing a return the controlled information is used to identify the caller, and once the return is accomplished, the entire frame is released. Thus, a frame always contains control information while the data storage may, or may not, be present.

DETAILS OF A PREFERRED EMBODIMENT

Referring now to Figure 1 there is shown the Descriptor Segment Base Register.

Word 0

Bit 0 is the New Stack Indicator (NS). If this bit is set to 1, then the new call and return instructions are allowed and they will cause a frame to be acquired/relinquished in the appropriate stack segment of the new stack. If this bit is set to 0, then the new call and return instructions are not allowed

and traps will be processed using trap save areas rather than the new stack.

Bit 1 is a new I/O indicator (NI). If this bit is set to 1, execution of I/O instructions requires new I/O handling.

Bits 2 and 3 are reserved for hardware use (RHU).

Bits 4-15 form the high order 12 bits of a 20 bit physical page frame address of a descriptor segment page table. The numerals (0:11) indicate that only bits 0-11 of the page frame number is in bit positions 4-15 of word 0.

Word 1

Bits 0-7 form the low order 8 bits of the 20-bit physical page frame address of the descriptor segment page table (DSPT). The numbers (12:19) indicate that only bits 12 through 19 of the page frame number are to be found in bits 0-7 of word 1.

Bits 8-15 is an Offset Address that allows a page table to start on a modulo 4 word boundary. The numbers (0:11) indicate that only 8 bits of the offset are in bit positions 8 through 10 of word 1.

Word 2

Bits 0-1 are reserved for hardware use (RHU).

Bits 2-9 form a Stack Base Address. This 8-bit field and the 2-bit R current define the segment number of the current stack segment when using the new stack mechanism NS.

Word 3

Bits 0-5 are reserved for hardware use (RHU).

Bits 6-15 is a Segment Descriptor Table Size. This field contains a 10-bit size field. If a virtual address (VA) is greater than the segment descriptor table size, then a segment trap results.

Referring now to Figure 2 there is shown a typical ring n stack segment. It should be noted that the stack segment is divided into a stack header, which is further subdivided into the portion of the stack segment which is for hardware use and the portion which is for software use. A portion of the stack segment for hardware use stores a current frame pointer (CFP) and a current frame length (CFL). The current frame pointer CFP is shown in Figures 3A and 3B. Figure 3A is for the segment number of the wired stack segment which is one less than the segment number for the non-wired stack segment. Figure 3B is for the segment number of the non-wired stack segment.

Referring to Figure 3A, bits 0-1 store the ring number of the stack. (Note that since this is the wired stack segment the value will always be 0.) Bits 2-9 store a stack base address which indicates

the base where a particular stack is located. Bits 12-31 indicate the displacement from the stack base where the current frame is located. (The current frame length CFL is a 32-bit unsigned integer whose value is less than 2^{20} ; in the non-wired version the integer would be 2^{30} .) Referring to Figure 3B, bits 0-1 stores a stack base address which will be used as the ring number by the hardware. The stack base is in bits 1-10 whereas the ring number of bits 0-1 is also in bits 10-11 where it will be concatenated to the stack base to arrive at the segment number or the stack segment of that particular ring. The displacement in bits 12-31 is the same as in Figure 3A.

Frame 1 of the ring n stack segment is divided into the link L_1 , control storage CS_1 and data storage DS_1 . The link is a pointer to the previous stack frame; e.g., L_2 of Frame Current points to L_1 of Frame 1. The control storage area CS_1 stores control information, such as for example, the return address of the calling procedure. The data storage area DS_1 is optional and is utilized to store data that may be required by the calling procedure.

The Frame Current is the current frame being utilized by the called procedure and is divided into a link L_2 and control storage CS_2 . The control storage performs the same function of any frame which stores control information.

It should be noted that the NS is a per-process stack to ensure isolation and thus protection among processes. Furthermore it is consistent with the concept of ring protection. Specifically the stack is subdivided into compartments in order to ensure that procedures may access only those compartments for which they are authorized. Since the virtual memory (VM) implementation defines the segment to be the unit of protection, the compartments referred to above are actually segments. It should be further noted that the NS also supports the concept of wired and non-wired stack segments. (A wired stack is always present in main memory; therefore when it is referenced no page fault will ever occur. A non-wired stack resides in virtual memory, and on a given reference a part of it may not be in main memory.)

This is required because the procedures of a process actually consist of user and operating system (OS) procedures. Some of the OS procedures cannot tolerate page faults. They must use a wired stack segment. All other procedures will use the non-wired stack segments. Thus, the NS is actually a stack that consists of a wired ring 0 stack segment and up to 4 consecutive non-wired ring stack segments (1 per ring) and supports both control as well as data storage.

Referring now to Figures 4 and 5, there is shown the format of addressing the wired ring 0 stack segment and the non-wired stack segments

for rings 0 through 3. The stack base address of the wired ring 0 stack segment is obtained from Word 2 of the descriptor segment base register shown in Figure 1 and stored (minus 1) in bits 2-11 of the current frame pointer as shown in Figure 4. Since the frame pointer is generated by the hardware, the ring number stored in bits 0-1 is 0. Utilizing the segment number and the ring number, the wired ring 0 stack segment can be located. Finally the displacement address stored in bits 12-31 indicates the address of the stack in the ring 0 stack segment acquired.

Figure 5 shows the format for addressing the non-wired stack segments for rings 0 to 3. It is similar to the format for Figure 4 except that the segment number is obtained from the stack base address stored in bits 2-9 and from the Ring Current RCR stored in bits 10-11.

Referring now to Figures 6 and 7 there is shown the state of three or the non-wired stack segments following initialization by the software and how they are managed by the hardware as a result of the call instruction.

Figure 6 shows the state of the stacks for a process currently executing in ring 3 which uses the stack frame called Frame Current 601 for its control and data information. It has been called from another procedure also operating in ring 3 with its stack frame indicated as Frame 1 602. Base Register 3 points to Frame Current link 603, which in turn contains a pointer 604 to the link word of the previous frame 605. This chain of links from the current frame backwards allows the chain of procedure calls by which the current procedure was reached, to be traversed in the return direction when the current procedure is completed. The current frame pointer 606 in the ring 3 stack segment provides a pointer to the link word for the topmost frame in that particular stack so that firmware can find this top frame any time it needs it. The ring 0 stack segment, and ring 2 stack segment in Figure 6 are both empty as noted by their current frame lengths being 0 in boxes 607 and 608. This will be normally the case for any procedure executing in the outer ring. Note that an empty stack segment may contain process state information in the software use area or the stack header. Process state information of long persistence, potentially for the life of the process, is expected to reside here.

Figure 7 shows the state of the stacks a short time later after the procedure which was using the frame current in Figure 6 has made a call to another procedure to be executed in ring 2. The stack frame that had been labelled Frame Current in Figure 6 is now shown as frame 2 for the ring 3 stack segment in Figure 7. Frame Current has moved over into the ring 2 stack segment because a new procedure is executing and it has been

invoked to run in ring 2. The link field for this frame 701 points back to the stack frame or the caller; i.e., to frame 2 of the ring 3 stack segment. Only control information is shown for the Frame Current in the ring 2 stack segment since the called procedure has not acquired any data storage.

Referring now to Figures 8-12, the logic of the call instruction is shown via flowcharts. This logic is implemented in firmware. The call instruction is utilized to specify a transfer of control from a calling procedure (CGP) to the called procedure (CDP). An effective address (EA) defines the CDP and its entry point. An R effective (REF) defines the effective execute privilege of the CGP.

Referring to Figure 8, the call instruction is fetched and REF of the calling procedure is computed. See block 101. This determines the procedure to be called and the entry point of the procedure. The next step 102 determines whether or not the new stack functionality (NS) is enabled. If it is not enabled, the instruction is illegal and is trapped as shown in box 103. If NS is enabled, the segment number specified in the effective address is utilized to fetch a segment descriptor for the segment which contains the procedure to be called during step 104. Then in steps 105 and 107, checks are performed to ensure that no page faults or traps occur while performing this function. If no faults or traps are detected, the segment descriptor (SD) which was fetched in step 104 is utilized to determine if the called procedure (CDP) is indeed callable and to compute the new ring effective number (REF) in which the called procedure will execute. See step 109. In step 110 there is a check that determines whether the execute bit or the called segment (procedure) is ON. If it is not ON a trap 111 is posted. If ON, go to the next step 201 in Figure 9.

Referring now to Figure 9 there is shown a flowchart that shows the checks that must be performed to determine if a call is indeed possible. Three possibilities can occur. One the call is successful and no ring change takes place. Two the call is successful and a ring change takes place. Three the call is not allowed. If the called and calling procedures are peer procedures; i.e., have the same execute privilege, then the call will be successful and no ring change takes place. This path is shown by steps 202, 204, 206 and 211. The tests performed in steps 202 and 206, in this case, basically state that $SD.R1 \leq REF \leq SD.R2$ or that REF is within the execute bracket of the called procedure.

If the called procedure has greater privilege than the calling procedure, then the call will be successful only if certain conditions are met. If all these conditions are met, then the call will be successful and a ring change takes place. This

path is shown by steps 202, 204, 206, 205, 207, 208, 209 and 210. If the call is not successful, then the path through steps 202, 204, 206 and 205 will terminate at any of the following steps, 213, 214, 215, or 216. The tests performed in steps 202 and 206, in this case, basically state that $SD.R2 < REF$ or that REF is not within the execute bracket of the called procedure and that the following conditions must be met to successfully complete the call.

Step 205 determines whether or not the calling procedure is outside the call bracket of the called procedure. (The call bracket is the range of ring numbers in which a calling procedure must be executing in order to make a call to a given segment.

If the calling procedure is outside the call bracket of the called procedure, then a trap 213 is invoked. If it is not, then the next step 207 is entered. In step 207 there is a check made to determine if the called procedure is a gate procedure. (A gate procedure is a procedure which may be entered via a call through a gate. This is required when a calling procedure is within the call bracket or a called procedure, but not within its execute bracket; i.e., when an inward ring cross must be made to effect the call.)

Since in this instant a ring crossing is necessary, (i.e., the ring numbers of the calling and called procedures are not equal) the called procedure must be in a gate segment. Accordingly in step 207 a check is made to determine if the gate bit of the segment descriptor is a 1. If it is a 1, then step 208 is entered. If it is not a 1, a trap 214 is taken which indicates that the called procedure is not in a gate segment. In step 208 a check is made to determine that the displacement of the Effective Address is within the gate array. (A gate array enumerates the entry points of the procedure segment in order to insure that control is not transferred to the procedure via an inward ring crossing call at a location other than at one of the entry points.)

If the answer to this test is yes, then there is a gate size violation and a trap 215 is entered. If the answer is no, indicating we are within the gate array, then step 209 is entered. In step 209 a check is performed to determine that the effective address EA is an even address to insure that we are pointing to the first word of a pointer which points to the called procedure. If the answer to this test is no, a trap 216 is entered. If, on the other hand the answer is yes, an inward ring crossing is performed as shown on step 210.

If the called procedure is less privileged than the calling procedure, then the call is not allowed as this would result in an outward call attempt. This path is shown by steps 202 and 212. The test performed in step 202, in this case, basically states

that $REF < SD.R1$ or that REF is more privileged than the execute bracket of the called procedure.

If privilege was lost during the computation of REF in step 101 of Figure 8, then the path shown by steps 202, 204 and 203 must be taken to protect against an outward call attempt. The test performed in step 204, in this case, states that privilege was lost during the computation of REF since REF is less privileged than RCR. Thus the test performed in step 203 is required to insure that the original (RCR) privilege of the calling procedure is not more privileged than the lowest privilege or the called procedure (SD.R2). If the answer to test 203 is Yes, then an outward call is being attempted and a trap 212 is entered. If the answer to test 203 is No, then proceed as if the called procedure has greater privilege than the calling procedure via steps 205, 207, 208, 209 and 210.

Referring now to Figure 10 there is shown a flowchart wherein a call frame is acquired in the appropriate stack segment (SS) of a new stack mechanism (NS) see step 302. First compute the value of the link to be stored in the call frame by reading the current frame pointer (CFP) in the current stack segment (CUSS). See step 303 and also Figure 2. In step 304 the current ring number RCR is used to compute the virtual address VA of the current stack segment CUSS. The CUSS contains the current frame which belongs to the calling procedure CGP. The header of the CUSS contains the current frame pointer CFP. The CFP is the value of the link to be stored in the call frame. See step 309 and Figure 2. Steps 305 and 307 determine whether or not a page fault or trap was detected.

Referring now to Figure 11 the flowchart shows how to compute the location where the call frame is stored. Depending on whether or not a ring change occurs, a new call frame will either be appended to the current stack segment or to an inner ring stack segment if the ring crossing takes place. Step 402, the virtual address VA of the target stack segment TSS is computed in order to be able to fetch its current frame pointer CFP and the current frame length CFL. See also Figure 2. In step 403 the R effective REF is utilized to find out where the target stack segment is. The first four words of the target stack segment containing the current frame pointer and the current frame length is read in step 404. These are utilized to compute the address of a new frame. In steps 405 and 407 a check is made for page faults and traps to insure that the operation can be successfully completed.

In step 410 it is determined whether a ring change has been performed or not. If R effective REF and R current RCR are equal, then the new call frame is being placed in the same stack segment which is the current stack segment and

checks are performed to insure the integrity of the stack shown in step 409. (Integrity means that everything is as it should be; i.e., consistent state.) The stack's integrity is insured if the current frame length CFL stored in the header of the stack segment is not equal to 0. If, on the other hand, REF is not equal to RCR as determined in step 410, there is an indication that an inward ring change is necessary and two different stack segments are involved--the current stack segment and the target stick segment. This case indicates that since we would be going from an outer ring to an inner ring, the target stack segment cannot possibly contain a stack frame at this time. Accordingly its current frame length must equal 0, as shown in box 411. If it does equal 0, then step 412 is entered where a final check on the integrity of the stack is made. Accordingly a new frame is placed in the target stick segment. The format of this target stack segment requires that the LINK pointed to by the current pointer be null.

Referring now to Figure 12 the call frame is stored in the target stack segment and the target stack segment's header is updated. In step 503 the virtual address of the called frame is computed using the current frame pointer CFP and the current frame length CFL. The call context is stored in the call frame in step 504. (A call context is information that indicates the state or a procedure when it was entered and is used to allow that procedure to access arguments passed to it and restore as necessary the processor state upon return to the caller.)

Then in steps 505 and 506 a check is made to determine whether a page fault or trap was detected. Once this has been performed, the current frame pointer is updated with the virtual address of the call frame base and the current frame length CFL is set as required in step 507. In step 508 it is determined whether or not a trap was detected. If there was a stack fault, step 509, results otherwise the next step E is entered.

Referring now to Figure 13 the virtual address VA of the call frame base is stored in register B3 (not shown) in step 1301. The R effective REF is then loaded into a procedure ring number counter (not shown). See step 1302. In step 1303 the effective address EA (EA.SN and EA.DSP) is loaded into a procedure pointer register P (not shown). Finally in step 1304 the call procedure execution is started.

Claims

1. Memory stack in a computer system of the multiprocessing/multiprogramming type with a ring architecture comprised of at least four rings (0-3) with the innermost ring (0) being the

highest level of privilege, said computer system having a plurality of processors for executing procedures thereon, a software operating system for supervising/scheduling the execution of the procedures, each procedure and the software operating system having a predetermined level of privilege, each of said procedures being executed at its predetermined level of privilege, said memory stack being organized to implement an operation with said ring architecture wherein a procedure which is executing at a lower level of privilege can execute at a higher level of privilege, characterized by

- a wired memory stack segment being always present in memory and being assigned to the highest priority one of said rings (ring 0) wherein the operating system cannot tolerate page faults;
- a plurality of non-wired memory stack segments (Fig. 6) residing in virtual memory and on a given reference such a segment being loaded into main memory, one of said non-wired stack segments being assigned to each of said rings (0-3); and
- wherein each of said wired and non-wired memory stack segments store the ring number of the ring to which they are assigned and wherein requests to alter the execute privilege of a procedure are generated by a call instruction, a request from a higher priority ring to a lower priority ring to process a procedure request is always granted and requests from lower priority rings to higher priority rings are normally blocked except under special conditions.

2. Method for permitting a procedure executing at a lower level of privilege to execute at a higher level of privilege in a multiprocessing/multiprogramming type computer system according to the preamble of claim 1, characterized by

- assigning a wired memory stack segment being always present in main memory to the highest priority ring wherein the operating system cannot tolerate page faults;
- assigning a non-wired memory stack segment residing in virtual memory and on a given reference being loaded into main memory to each of said rings; and
- checking information stored in each of said wired and non-wired memory stack segments indicating the ring to which they are assigned when a request gen-

erated by a call instruction is made to process a procedure request in a different ring, and always granting a request from a higher priority ring to a lower priority ring and normally blocking each request from lower priority rings to higher priority rings unless special conditions are met.

Patentansprüche

1. Speicherblock in einem Computersystem vom Mehrfachverarbeitungs-/Mehrprogrammbetriebs-Typ mit einer Ringarchitektur, die zumindest vier Ringe (0-3) aufweist, wobei der innerste Ring (0) das höchste Privilegsniveau hat, wobei das Computersystem eine Vielzahl von Prozessoren zum Ausführen von Prozeduren darin, ein Softwarebetriebssystem zum Überwachen/Planen der Ausführung der Prozeduren hat, wobei jede Prozedur und das Softwarebetriebssystem ein vorbestimmtes Privilegsniveau haben, wobei jede der Prozeduren bei einem vorbestimmten Privilegsniveau ausgeführt wird, wobei der Speicherblock organisiert ist, um eine Operation mit der Ringarchitektur durchzuführen, worin eine Prozedur, die bei einem niedrigeren Privilegsniveau ausgeführt ist, bei einem höheren Privilegsniveau ablaufen kann,

gekennzeichnet durch

- ein verdrahtetes Speicherblocksegment, das immer im Speicher vorhanden ist, und das der höchsten Priorität eines der Ringe (Ring 0) zugewiesen ist, worin das Betriebssystem Fehlseiten nicht tolerieren kann;
- eine Vielzahl von nicht verdrahteten Speicherblocksegmenten (Fig. 6), die im virtuellen Speicher liegen, und wobei auf einen gegebenen Verweis ein derartiges Segment in den Hauptspeicher geladen wird, wobei eines der nicht verdrahteten Speichersegmente jedem der Ringe (0-3) zugewiesen ist; und
- worin jedes der verdrahteten und nicht verdrahteten Speicherblocksegmente die Ringnummer des Ringes, dem sie zugewiesen sind, speichert und worin Anforderungen, das Ausführungsprivileg einer Prozedur zu ändern, erzeugt werden durch eine Rufanweisung, eine Anforderung, von einem Ring höherer Priorität zu einem Ring niedrigerer Priorität eine Prozeduranforderung durchzuführen, ist immer gewährt und Anforderungen von Ringen niedrigerer Priorität zu Ringen höherer Priorität sind normalerweise

blockiert, außer unter besonderen Bedingungen.

2. Verfahren zum Erlauben einer Prozedur, die auf einem niedrigeren Privilegsniveau abläuft, auf einem höheren Privilegsniveau in einem Computersystem vom Mehrfachverarbeitungs-/Mehrprogrammbetriebs-Typ abzulaufen gemäß dem Oberbegriff des Anspruchs 1, gekennzeichnet durch

- Zuweisen eines verdrahteten Speicherblocksegmentes, das immer im Hauptspeicher vorhanden ist, zu dem Ring höchster Priorität, worin das Betriebssystem Fehlseiten nicht tolerieren kann;
- Zuweisen eines nicht verdrahteten Speicherblocksegmentes, das im virtuellen Speicher liegt und das auf eine gegebene Referenz in den Hauptspeicher geladen wird, zu jedem der Ringe; und
- Prüfen von Information, die in jedem der verdrahteten und nicht verdrahteten Speicherblocksegmente gespeichert ist, die den Ring, zu dem sie zugewiesen sind, anzeigt, wenn eine Anforderung, die durch eine Rufanweisung erzeugt ist, gemacht ist, um eine Prozeduranforderung in einem unterschiedlichen Ring durchzuführen, und Gewähren immer einer Anforderung von einem Ring höherer Priorität zu einem Ring niedrigerer Priorität und Blockieren normalerweise jeder Anforderung von Ringen niedrigerer Priorität zu Ringen höherer Priorität, sofern keine besonderen Bedingungen vorliegen.

Revendications

1. Pile de mémoire dans un système informatique de multitraitement/multiprogrammation avec une architecture en anneau comprenant au moins quatre anneaux (0-3), l'anneau le plus interne (0) étant le niveau de privilège le plus élevé, ledit système informatique comportant une pluralité de processeurs pour exécuter des procédures dans ce système, un système d'exploitation de logiciel pour superviser/synchroniser l'exécution des procédures, chaque procédure et le système d'exploitation de logiciel ayant un niveau de privilège prédéterminé, chacune desdites procédures étant exécutée à son niveau de privilège prédéterminé, ladite pile de mémoire étant organisée de manière à réaliser une opération avec ladite architecture annulaire dans laquelle une procédure qui est exécutée à un niveau de privilège inférieur peut être exécutée à un ni-





veau de privilège supérieur, caractérisée par :

- un segment de pile de mémoire câblé toujours présent en mémoire et assigné à la priorité la plus élevée desdits anneaux (anneau 0), dans lequel le système d'exploitation ne peut pas tolérer de défaut de page; 5
- une pluralité de segments de piles de mémoire non câblés (fig. 6) résidant en mémoire virtuelle et sur une référence donnée un tel segment étant chargé en mémoire principale, un desdits segments de piles non câblés étant assigné à chacun desdits anneaux (0-3); et 10
- dans laquelle chacun des segments de piles de mémoire câblés et non câblés mémorise le numéro de l'anneau auquel il est assigné, et dans laquelle des requêtes pour modifier le privilège d'exécution d'une procédure sont générées par une instruction d'appel, une requête d'un anneau de priorité supérieure vers un anneau de priorité inférieure pour traiter une requête de procédure étant toujours accordée et les requêtes d'anneaux de priorités inférieures vers des anneaux de priorités supérieures étant normalement bloquées sauf dans des conditions spéciales. 15 20 25

2. Procédé pour permettre qu'une procédure exécutée à un niveau de privilège inférieur soit exécutée à un niveau de privilège supérieur dans un système informatique de multitraitement/multiprogrammation selon le préambule de la revendication 1, caractérisé par : 30

- l'assignation d'un segment de pile de mémoire câblé toujours présent en mémoire principale à l'anneau de priorité la plus élevée, dans laquelle le système d'exploitation ne peut pas tolérer de défaut de page; 35 40
- l'assignation d'un segment de pile de mémoire non câblé résidant en mémoire virtuelle et sur une référence donnée chargé en mémoire principale à chacun desdits anneaux; et 45
- le contrôle des informations mémorisées dans chacun desdits segments de piles de mémoire câblés et non câblés indiquant l'anneau auquel ils sont assignés lorsqu'une requête générée par une instruction d'appel est faite pour traiter une requête de procédure dans un anneau différent, toujours l'accord d'une requête d'un anneau de priorité supérieure vers un anneau de priorité inférieure et nor- 50 55

malement le blocage des requêtes d'anneaux de priorités inférieures vers des anneaux de priorités supérieures à moins que des conditions spéciales soient satisfaites.

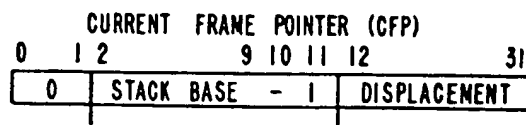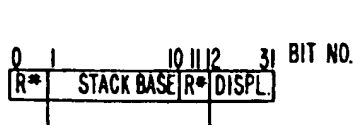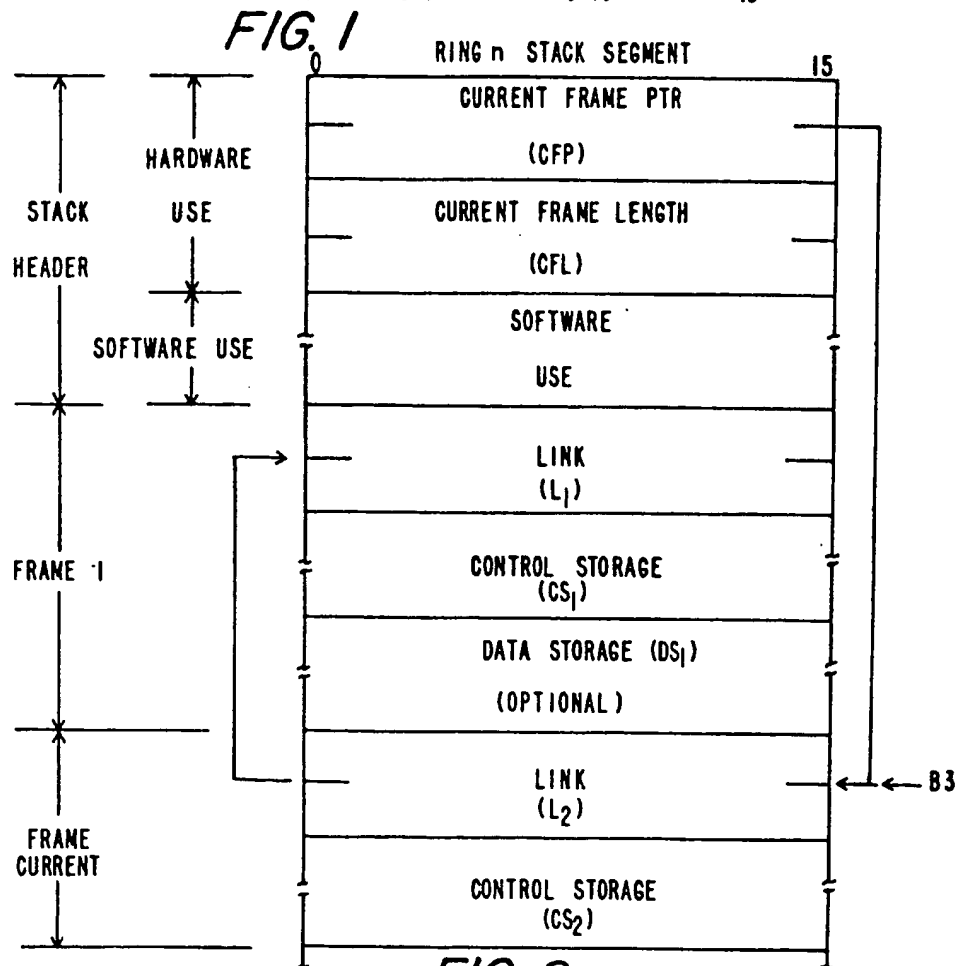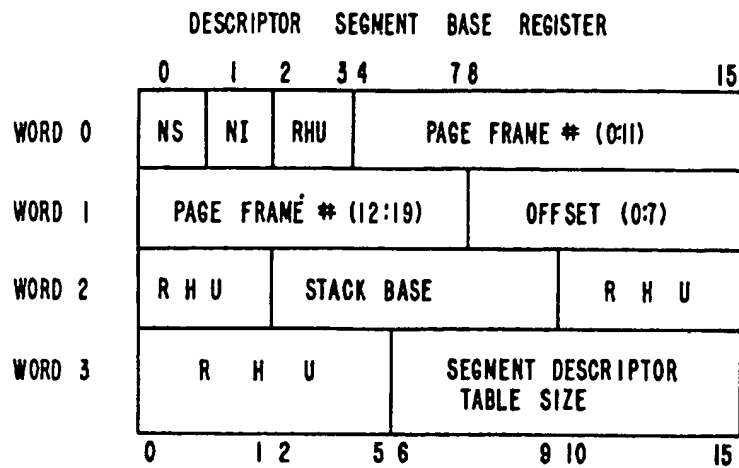

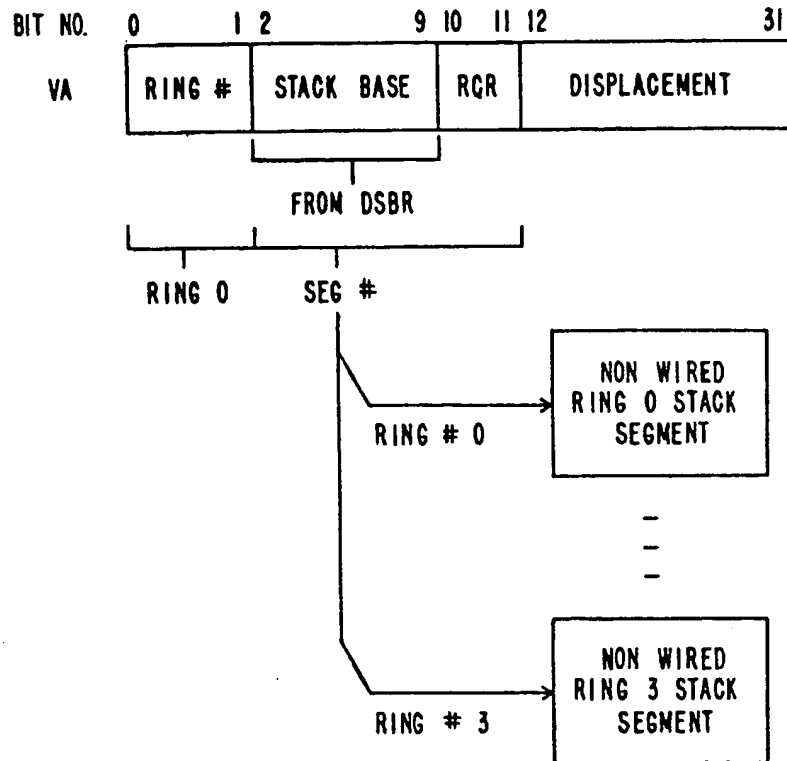


FIG. 5

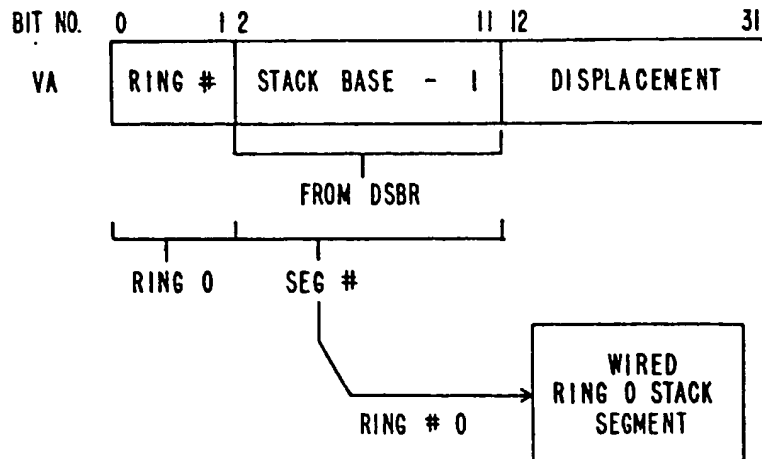


FIG. 4

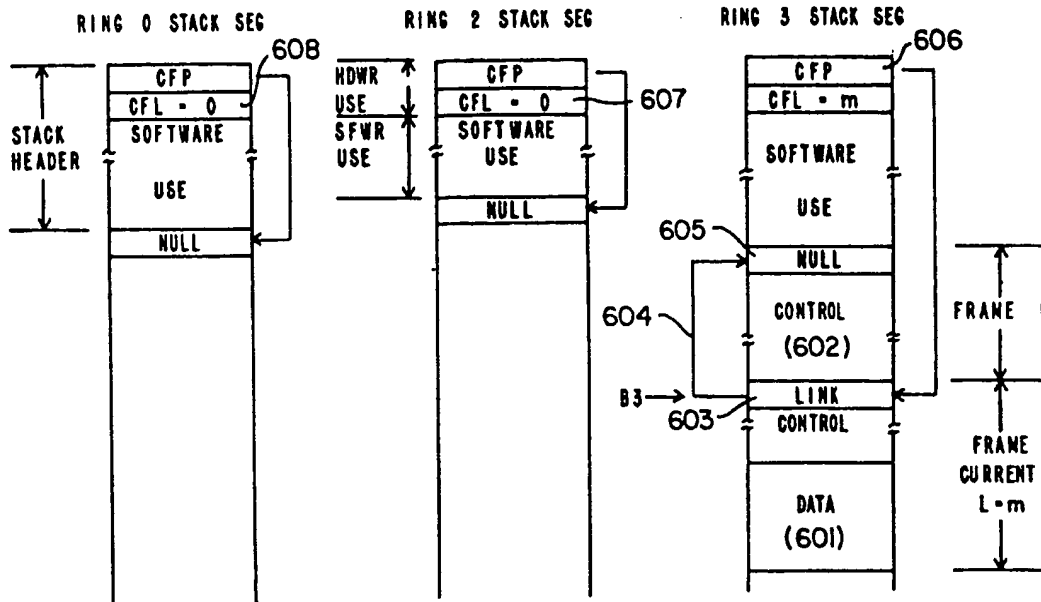


FIG. 6

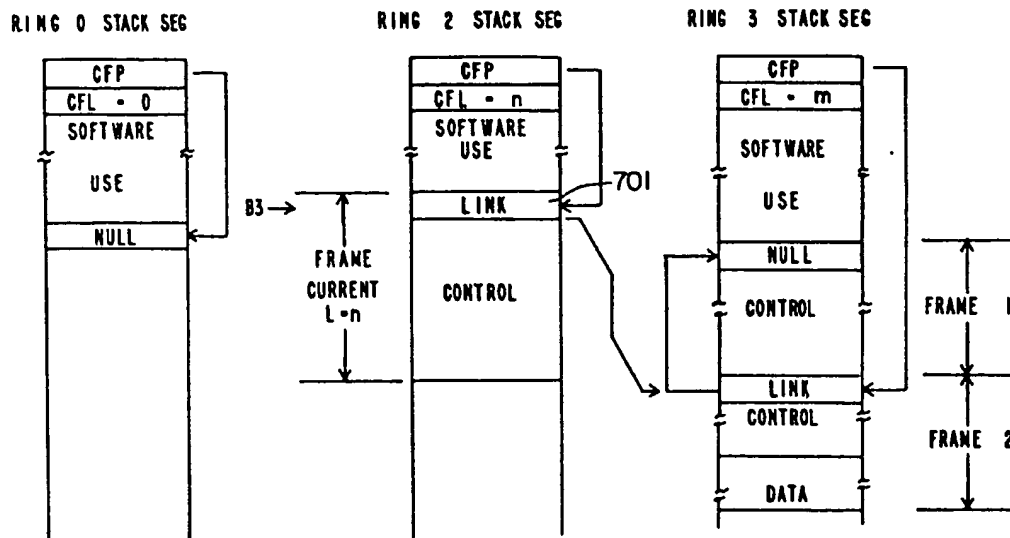


FIG. 7

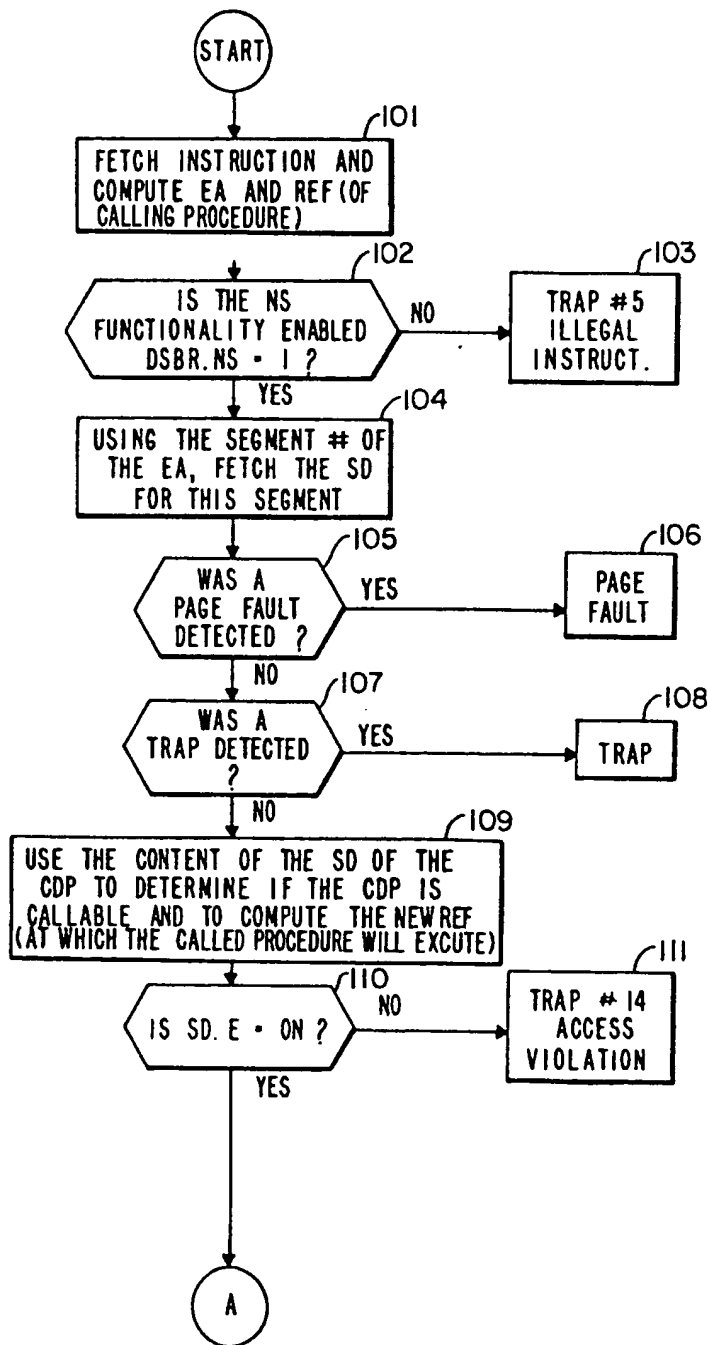


FIG. 8

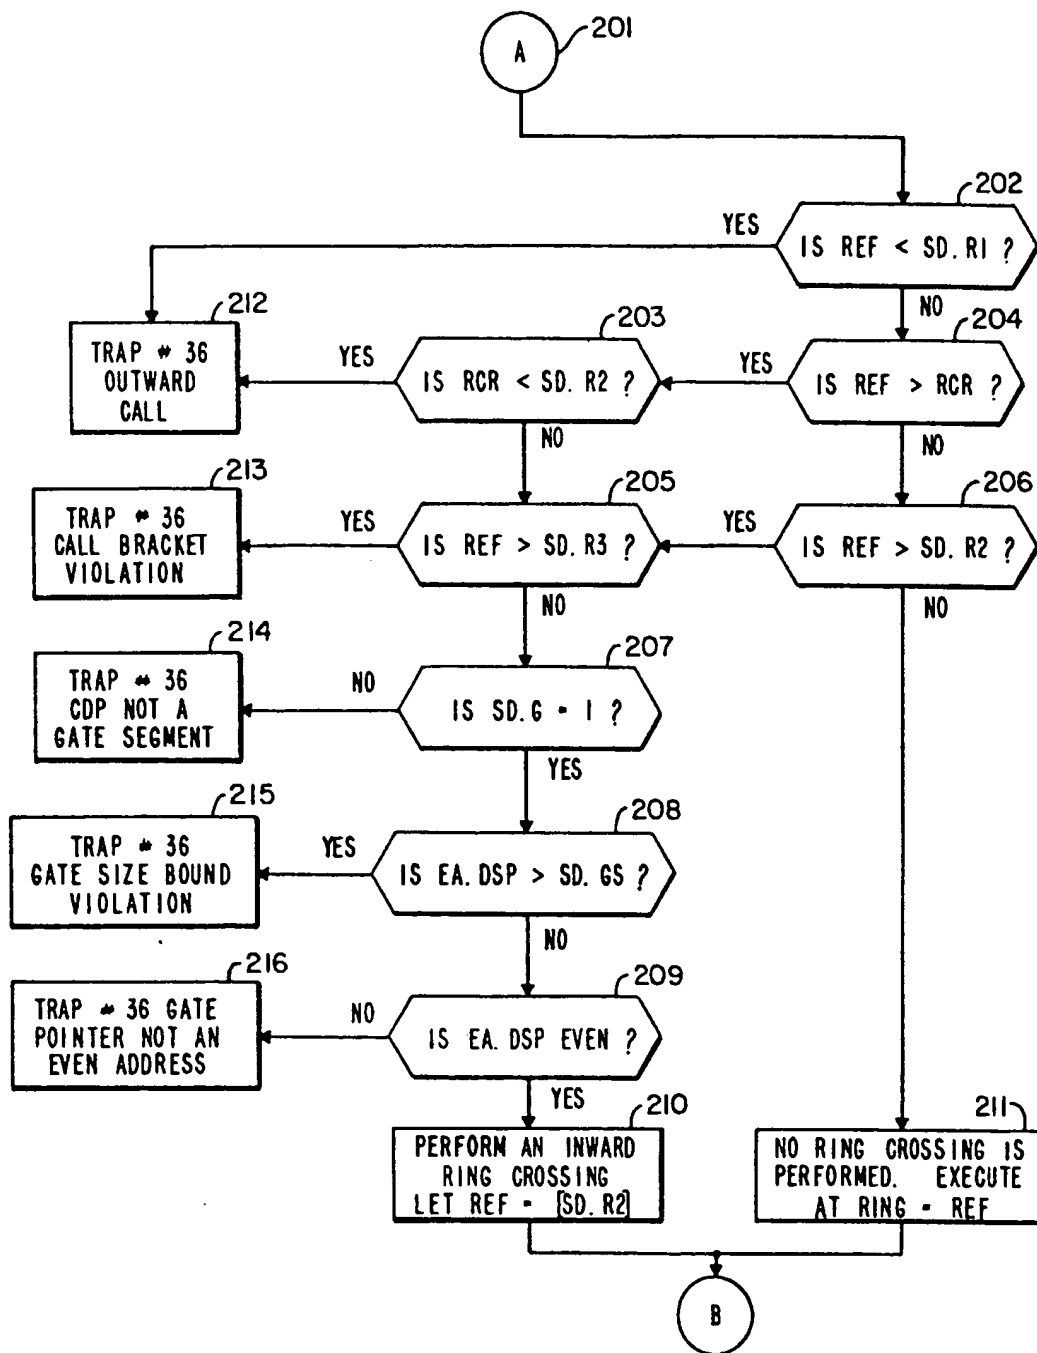


FIG. 9

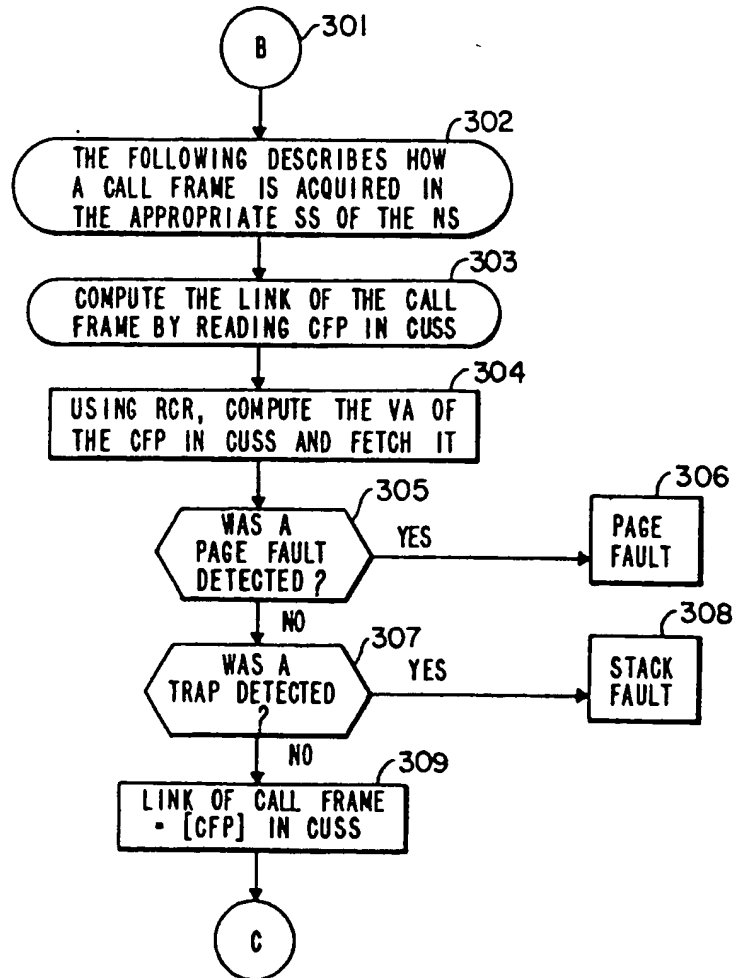


FIG. 10

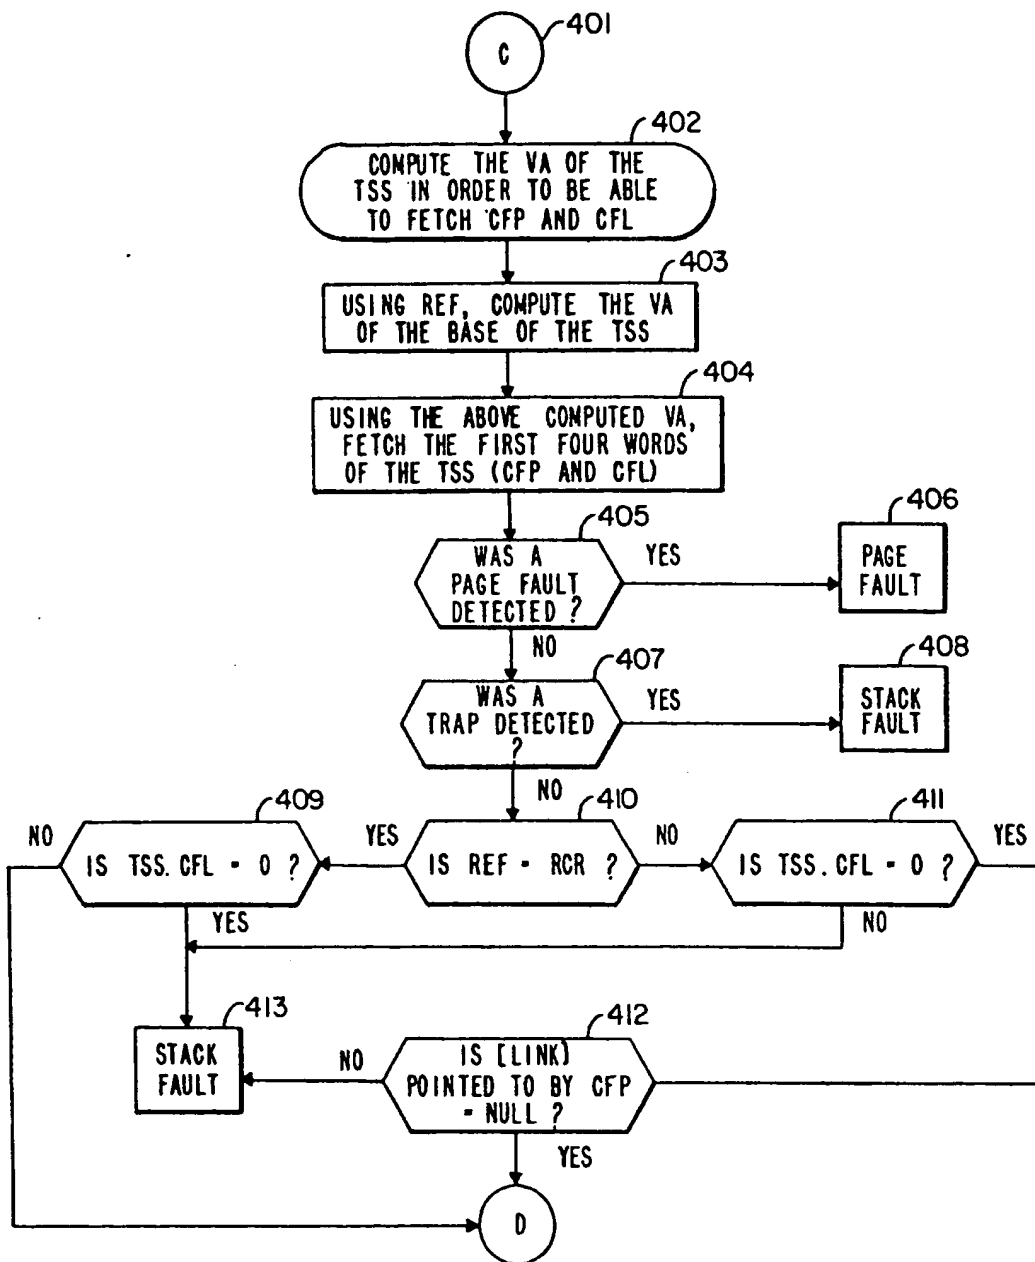


FIG. II

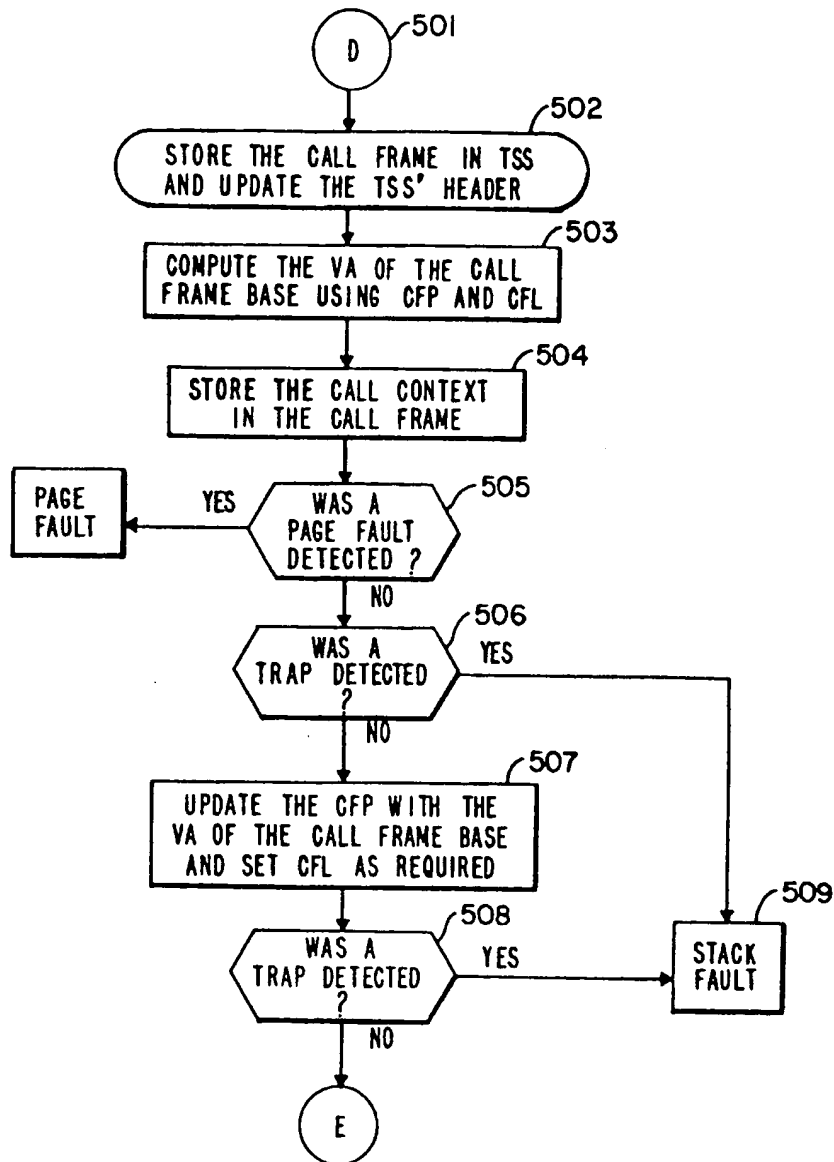


FIG. 12

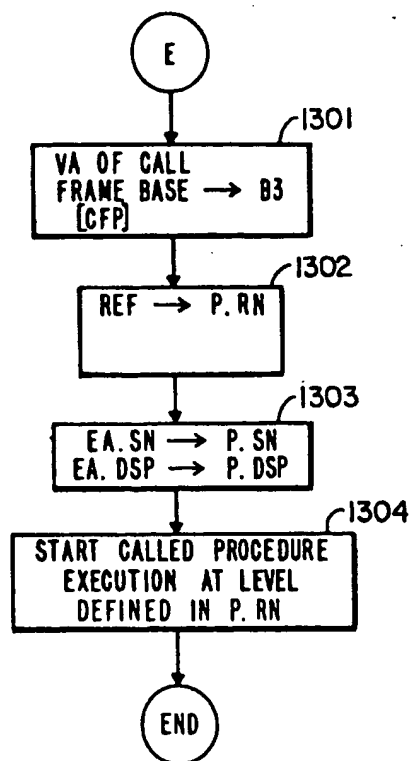


FIG. 13